

## 4116 UNIVERSAL JOINT INSTALLER/REMOVER

萬向十字接頭拆裝器(中、小型貨車) (MID.TRUCK)

- To remove and install universal joint of transmission shaft.
- Using C clamp as a support to remove the joint.
- Applicable: Middle truck: MITSUBISHI (CANTER), NISSAN, TOYOTA, MAZDA, ISUZU...and etc.
- Patented.



INSTALL

REMOVE



VIDEO OF INSTRUCTION



## 4079 TRUCK CONTROL ARM BALL JOINT REMOVER

方向機搖臂球接頭拆卸器(堅達)

- Special designed to remove the ball joint upper of the control arm.
- Use for both sides of ball joint.
- Applicable: MITSUBISHI CANTER, FUSO, and light truck...etc.



## 4076 CHANGEABLE BALL JOINT SEPARATOR SET

更換型球接頭拔卸器

- Innovative quick change and simple action for suitable fork.
- Enable operator to select correct jaw size without taking entire extractor to the vehicle.
- Jaw Opening: 20, 22, 24, 27, 30mm.
- Thrust screw lengths: 100mm.
- Pivot rod length: 125mm.



## 4075 CHANGEABLE HYDRAULIC BALL JOINT SEPARATOR

更換型油壓球接頭拔卸器

- Special designed to be operated manually or by 12 ton hydraulic ram.
- Features a step down tread adapter that allows fitting of the manual thrust screw or 12 ton hydraulic ram supplied.
- For splitting track-rod ends, anti-roll bar mounting and ball joint.
- Jaw Opening: 30, 34, 40mm.
- Thrust screw lengths: 100, 80mm.
- Pivot rod length: 125mm.



## 4049 STEERING WHEEL HOLDER & PEDAL

方向盤, 剎車踏板固定器

Steering wheel:

- firmly holds steering wheel in position when setting to angle.
- Has a trigger-controlled mechanism and a thumb lock release, pedal depressor (brake/gas):
- This brake and gas depressor is designed to use the front seat of the car to obtain leverage.
- Place the point end of depressor on the pedal and use the small release lever above the spring to free the trigger mechanism in order to place the jack in place against the seat.
- Then press the trigger mechanism to put pressure on the brake or gas pedal, the pedal jack will maintain the pressure until the release lever is pressed.

