


4873 HUB PULLER & SEPARATOR

5孔輪軸拆裝器

- Fix the plate on the tire screw thread, screw the bolt to separate the wheel drive Shaft and hub by pushing.
- Pick the fit output shaft adaptor to meet central screw, then lock in the transmission shaft, put the frame on, lock the nut and fix the screw to pull the wheel shell close to the drive shaft.
- Output shaft adaptor: M22 x 1.5, M24 x 1.5, M27 x 1.5, M30 x 1.5
- Patented.

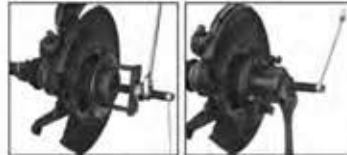

4816 HUB SLIDE HAMMER PULLER

歐式5孔輪軸滑鏈組

- Extra large internal hole for European cars.
- Coverage with five oval-shaped holes to meet different sizes of hubs.
- Hammer weight: 4.3kgs



4817 HUB SLIDE HAMMER PULLER (OUTSIZE HAMMER)

特大型5孔輪軸滑鏈組

- Extra large internal hole for European cars.
- Coverage with five oval-shaped holes to meet different sizes of hubs.
- Increasing the power of pulling with both hands held outside hammer.
- Hammer weight: 6.3kgs



4920 4 HOLE HUB SLIDE HAMMER PULLER

特大型4孔輪軸滑鏈組 (OUTSIZE HAMMER)

- Special designed to pull out the 4 bolt front hub easily with outside hammer.
- Increasing the power of pulling with both hands held outside slide hammer.
- Hammer weight: 6.3 kgs.



4920S HUB SLIDE HAMMER SET

特大型輪軸滑鏈組(雙盤面)

- With 4 holes and 5 holes for all the vehicles.
- Increasing the power of pulling with both hands held outside slide hammer.
- Hammer weight: 6.3 kgs.

