

### 4133 SUZUKI (JIMNY) FRONT WHEEL NUT

#### JIMNY 前輪軸套筒(4孔) SOCKET (4 HOLES)

- Special designed to remove the front wheel nut with 4 holes.
- Applicable: SUZUKI (JIMNY) 1.3



### 4890 BEARING RACE & SEAL DRIVER SET

#### 斜型培令套按裝器(小型)

- Quickly & easily inserts wheel bearing races & seals without damaging the race & axle housing.
- Contents: 13-Adaptors: 10, 12, 14, 15, 16, 18, 19, 20, 22, 25, 26, 28, 30mm
- 3-Driver handles: 115, 140, 160mm(L)



### 1611 8PCS BEARING RACE & SEAL DRIVER SET

#### 8PCS 斜型培令套按裝器

- Quickly & easily inserts wheel bearing races & seals without damaging race & axle housing.
- 7 disc sizes for most standard wheel bearing.
- The flat surface of the 7 disc can drive seals evenly.



### 1610A FWD FRONT WHEEL BEARING TOOL

#### 仰角培令拆裝器

- A great tool used to replace front wheel bearings without removing the steering knuckle & strut assembly.
- As the spindle assemble isn't removed, there is no need to align front end after the job is done.



REMOVE



### 1001 FWD FRONT WHEEL BEARING TOOL

#### 仰角培令拆裝器(23PCS)

- A great tool used to replace front wheel bearings without removing the steering knuckle & strut assembly.
- As the spindle assemble isn't removed, there is no need to align front end after the job is done.
- Fit on most cars.
- Applicable with hydraulic press.



INSTALL



REMOVE



### 4885 HYDRAULIC WHEEL BEARING TOOL

#### 仰角培令用油壓配件

#### ASSORTMENTS

- Available using with JTC-1001 & 1610A ; effort-saving and speed purpose.
- Contents: Reserved cylinder x 1pc  
Hydraulic coupler hose half 3/8"  
NPT (JTC-CP352) x 1pc  
18mm long screw set x 1set

